


SpanSet secutex®

01

Lifting
Buffer pad
Lifting equipment




secutex Clip sleeves

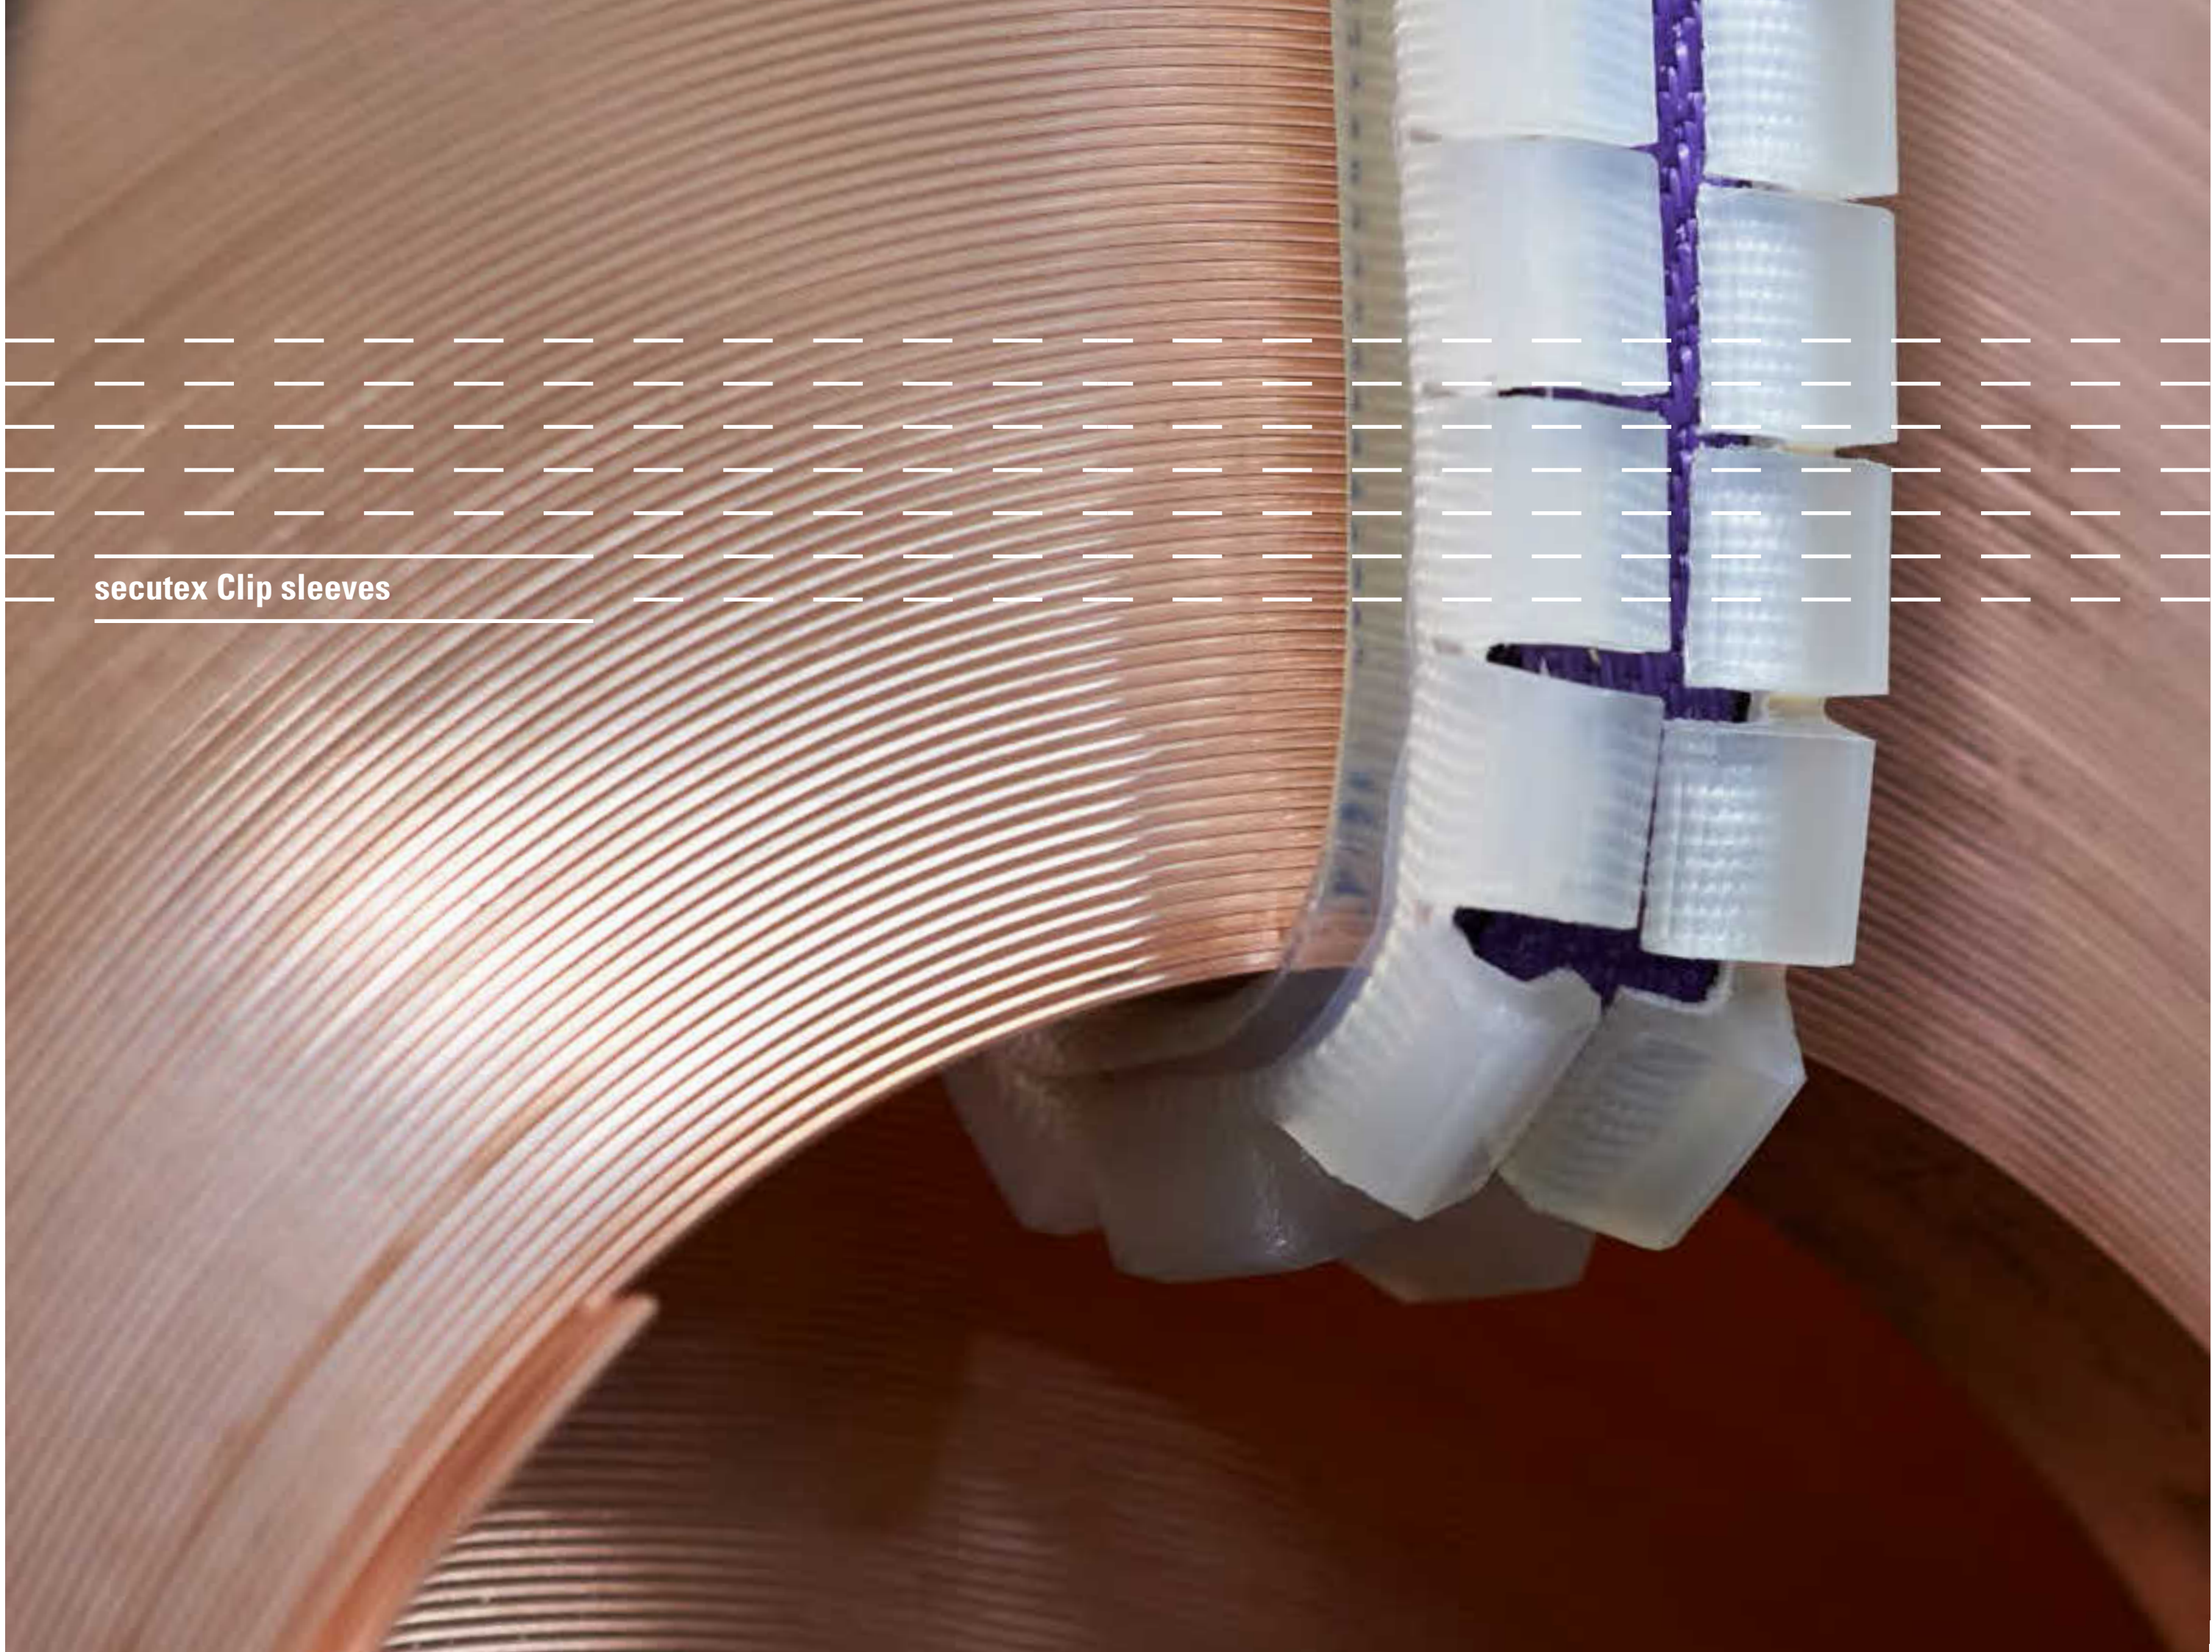

01.3 SECUTEX PROTECTIVE HOSES

secutex Split band turning strap

secutex Split band turning strap

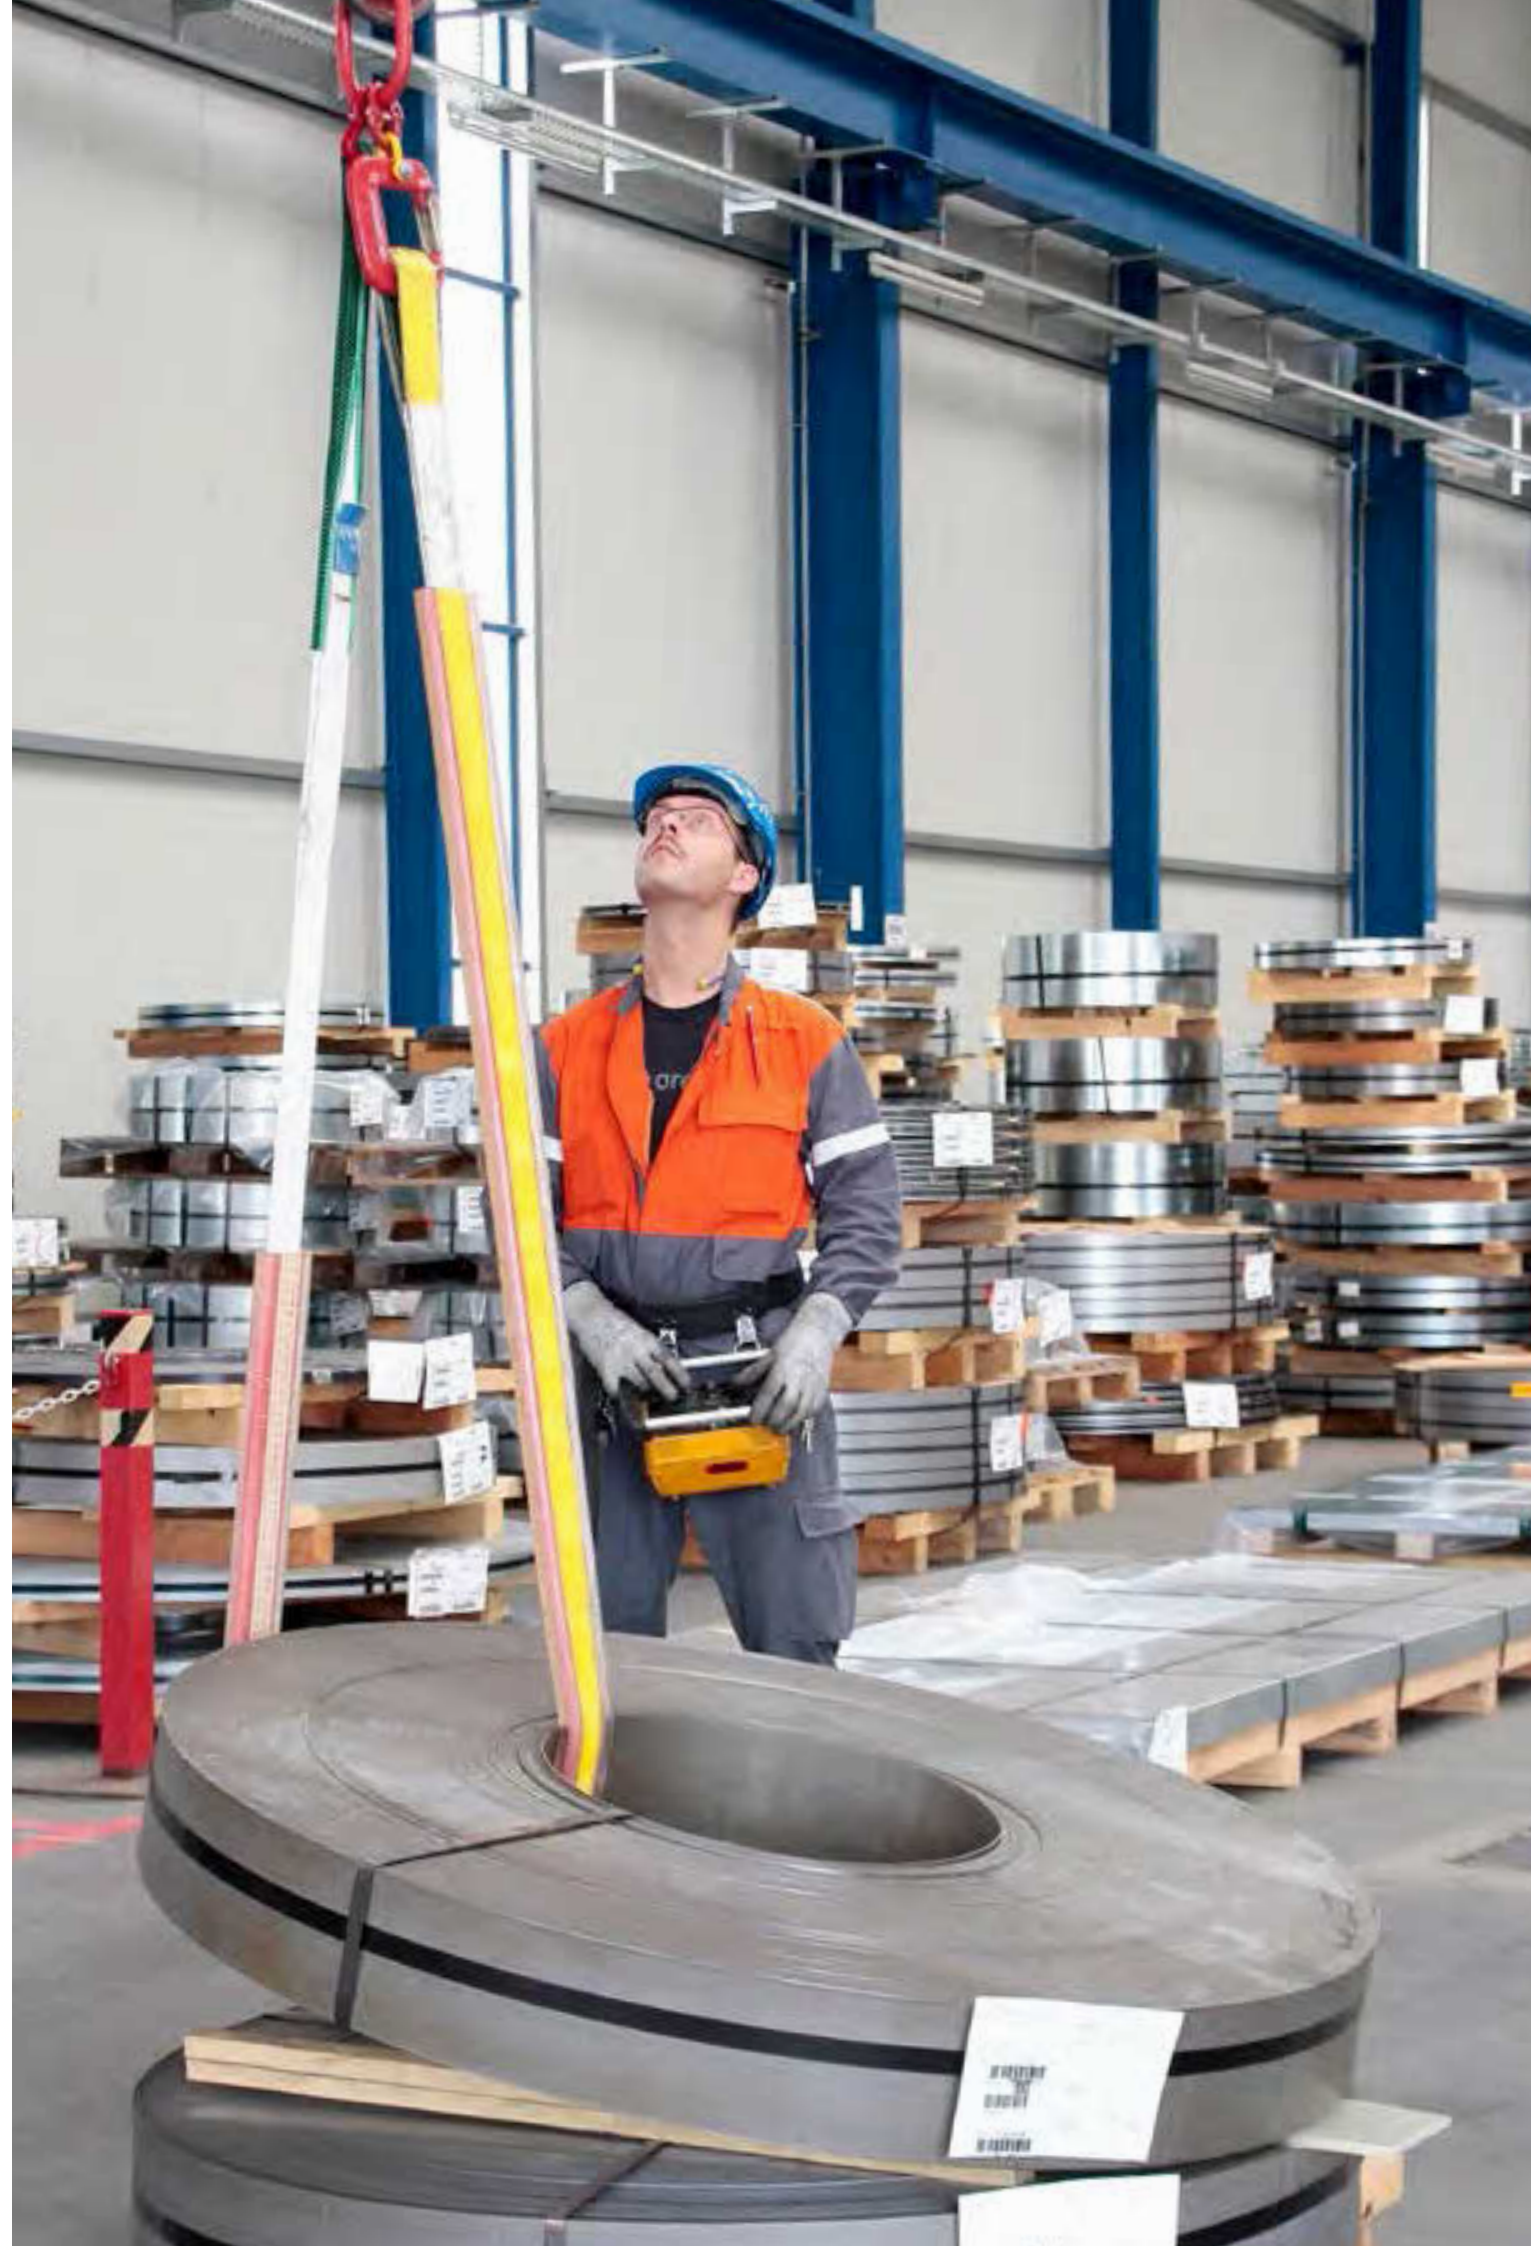

Optional secutex turning mat: no uncontrolled slipping

To raise stacked coils

We recommend against turning stacked coils upright on the stack. The first choice for the raising of packages delivered in a horizontal position with split straps is therefore always a coil turning seat. However, there is not always a fixed installation for raising narrow coils.

The secutex split band turning strap has two different attachment ends. One end loop of the secutex lifting strap is flat [see small image], and can be easily threaded through the gap between the split bands.

The flat end loop can then be easily hooked into the forged C-shackle. The protective sleeve is positioned against the „sharp edges“ of the coil. During lifting, the strap moves freely through the protective sleeve while the latter remains motionless against the load. There is no movement, and therefore no wear, against the „sharp edges“.

The split band turning strap set:

- Ring KR 3.2 with C-shackle with VG 8-8 and shackle 8-8
- Lifting strap PB 2000 with KK 8
- secutex protective sleeve SF-1-60 without edge
- secutex edge protection mat SPGF-F-10 in 200 x 300 mm

The advantages

- The lifting strap and protective sleeve are permanently linked together
- Extremely flat loop which is therefore perfect for small gaps Optional

Optional

- Various surfaces available
- secutex turning mat against uncontrolled slipping on floor


secutex Protective sleeves
Technical data and order overview

01.3 SECUTEX PROTECTIVE HOSES

Technical data and order overview


secumove
secutex split strap turning strap

secumove



	Load lifting capacity [kg]	Minimum length L1 [mm]	Lifting strap length [mm]	Thickness [mm]
PB 1000-FS-1	1000	2000	600	25
PB 2000-FS-1	2000	2000	600	25
PB 3000-FS-1	3000	2500	800	25
PB 4000-FS-1	4000	2500	800	25
PB 5000-FS-1	5000	3000	1000	25
PB 6000-FS-1	6000	4000	1400	30
PB 8000-FS-1	8000	4000	1600	35
PB 10000-FS-1	10000	5000	2000	35
PCS 2000-FS-1	2000	2000	700	25
PCS 4000-FS-1	4000	2500	800	35
PCS 6000-FS-1	6000	3000	1200	35
PCS 8000-FS-1	8000	4000	1600	40
PCS 10000-FS-1	10000	5000	1800	40
PCS 12000-FS-1	12000	6000	2200	40
PCS 16000-FS-1	16000	6000	2400	45
PCS 20000-FS-1	20000	7000	2800	45
PB 1000-FS-2	1000	2000	600	25
PB 2000-FS-2	2000	2000	600	25
PB 3000-FS-2	3000	2500	800	25
PB 4000-FS-2	4000	2500	800	25
PB 5000-FS-2	5000	3000	1000	25
PB 6000-FS-2	6000	4000	1400	30
PB 8000-FS-2	8000	4000	1600	35
PB 10000-FS-2	10000	5000	2000	35
PCS 2000-FS-2	2000	2000	700	25
PCS 4000-FS-2	4000	2500	800	35
PCS 6000-FS-2	6000	3000	1200	35
PCS 8000-FS-2	8000	4000	1600	40
PCS 10000-FS-2	10000	5000	1800	40
PCS 12000-FS-2	12000	6000	2200	40
PCS 16000-FS-2	16000	6000	2400	45
PCS 20000-FS-2	20000	7000	2800	45

secutex split strap turning strap



	Load lifting capacity [kg]	Protective sleeve width [mm]	Lifting strap length [mm]	Lifting strap width [mm]	Thickness [mm]
PB-2000-SWB	2000	70	2000	60	20
PB-2000-SWB	2000	70	2500	60	20
PB-2000-SWB	2000	70	3000	60	20
PB-2000-SWB	2000	70	4000	60	20

www.secutex.com

Technical changes reserved. All rights reserved. No part of the catalogue may be reproduced in any form (print, photocopy, or other process) without written permission or processed, copied or distributed using electronic systems. This catalogue has been drawn up with due diligence;

SpanSet-secutex assumes no liability for errors or omissions.
D01–Main–Heben–1–08/14, 2014 SpanSet-secutex GmbH, Germany

**SpanSet-secutex
Sicherheitstechnik GmbH**

Am Forsthaus 33

52511 Geilenkirchen

Germany

Tel +49 (0)24 51 48 45 73-0

Fax +49 (0)24 51 48 45 73-119

info@secutex.de

www.secutex.de

Your SpanSet-secutex works representative